



Cut of fold along this line

Vertical

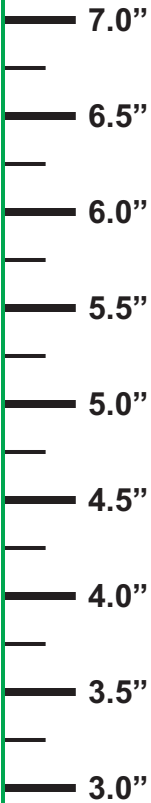

*Place this edge against the exhaust flange (not the tube of the outlet)

Use this ruler to measure to the center of the exhaust flange. Note as Vertical.

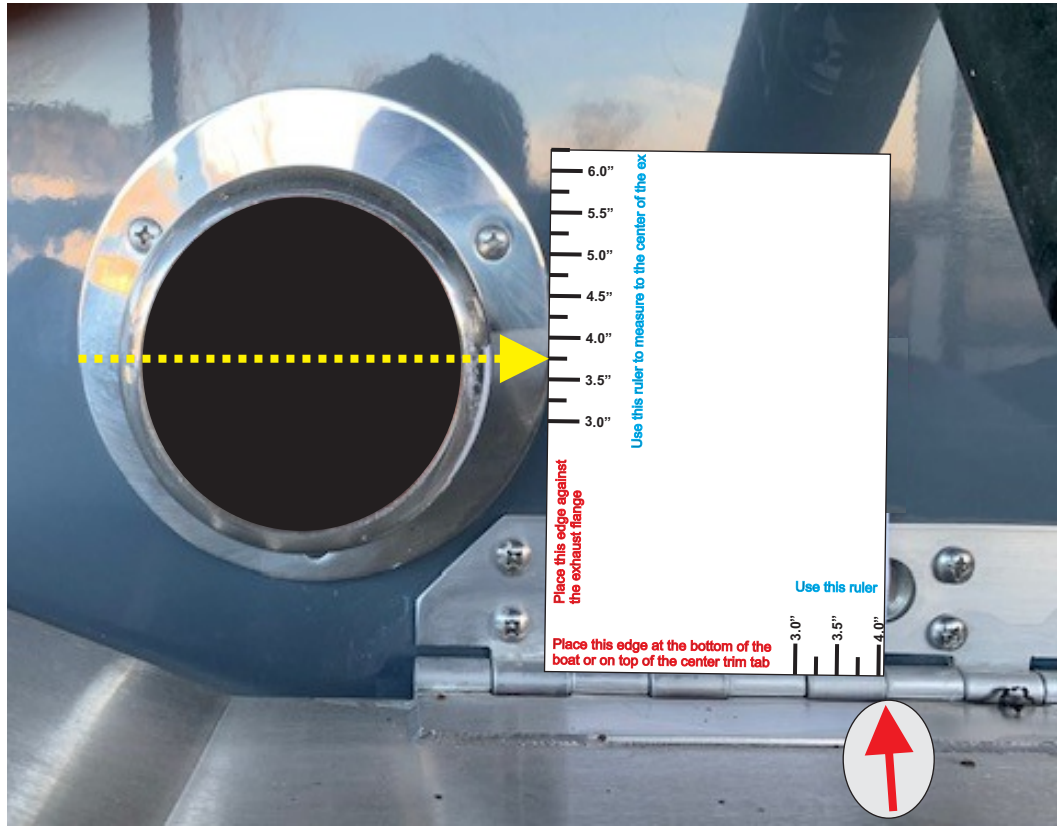

Please print this (Actual Size if that is a printing option), and use a ruler to measure and verify that it printed to the correct dimensions. Cut or fold along the green lines. It may help to cut along the blue dotted line as well since the trim tab actuator may be in the way.

Place this upon the trim tab or hinge (or bottom edge of the boat) and against the exhaust **FLANGE** as shown in the picture above. You may need to make a mark at the center of the trim tab (masking tape helps) so you can see the center of the boat with this paper in place. Send us the measurements at the center of the exhaust outlet flange, and the center of the boat, and send us a picture with ruler in place on transom and both measurements clearly shown.

In the picture above, the measurement is 3.75" vertical (up) and 4.0" horizontal (center to port).

Use this ruler to measure to the center of the boat. Note as horizontal.

Place this edge at the bottom of the boat or on top of the center trim tab



Cut of fold along this line

Horizontal